
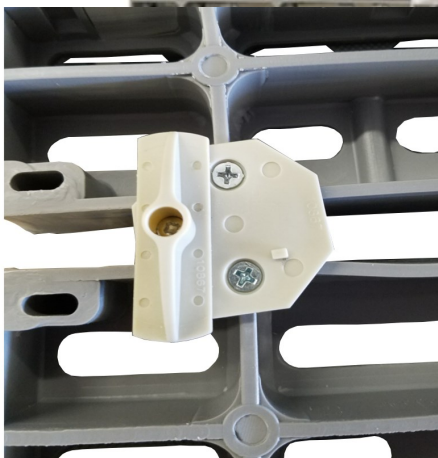


PN #10851: Gray Poly 4'x4' Deck Section Assembly Instructions

- Lay out the 1'x4' poly deck boards parallel to each other creating the 4'x4' deck section. Spacing of each 1'x4' poly deck board is approximately 5/8". Spacing is pre-determined by hole placement.
- Place 1"x1" aluminum stringer onto the deck boards and line up the holes in the stringer with the pre-drilled holes in the poly deck boards.
- Secure stringer with 1" long pan head screws

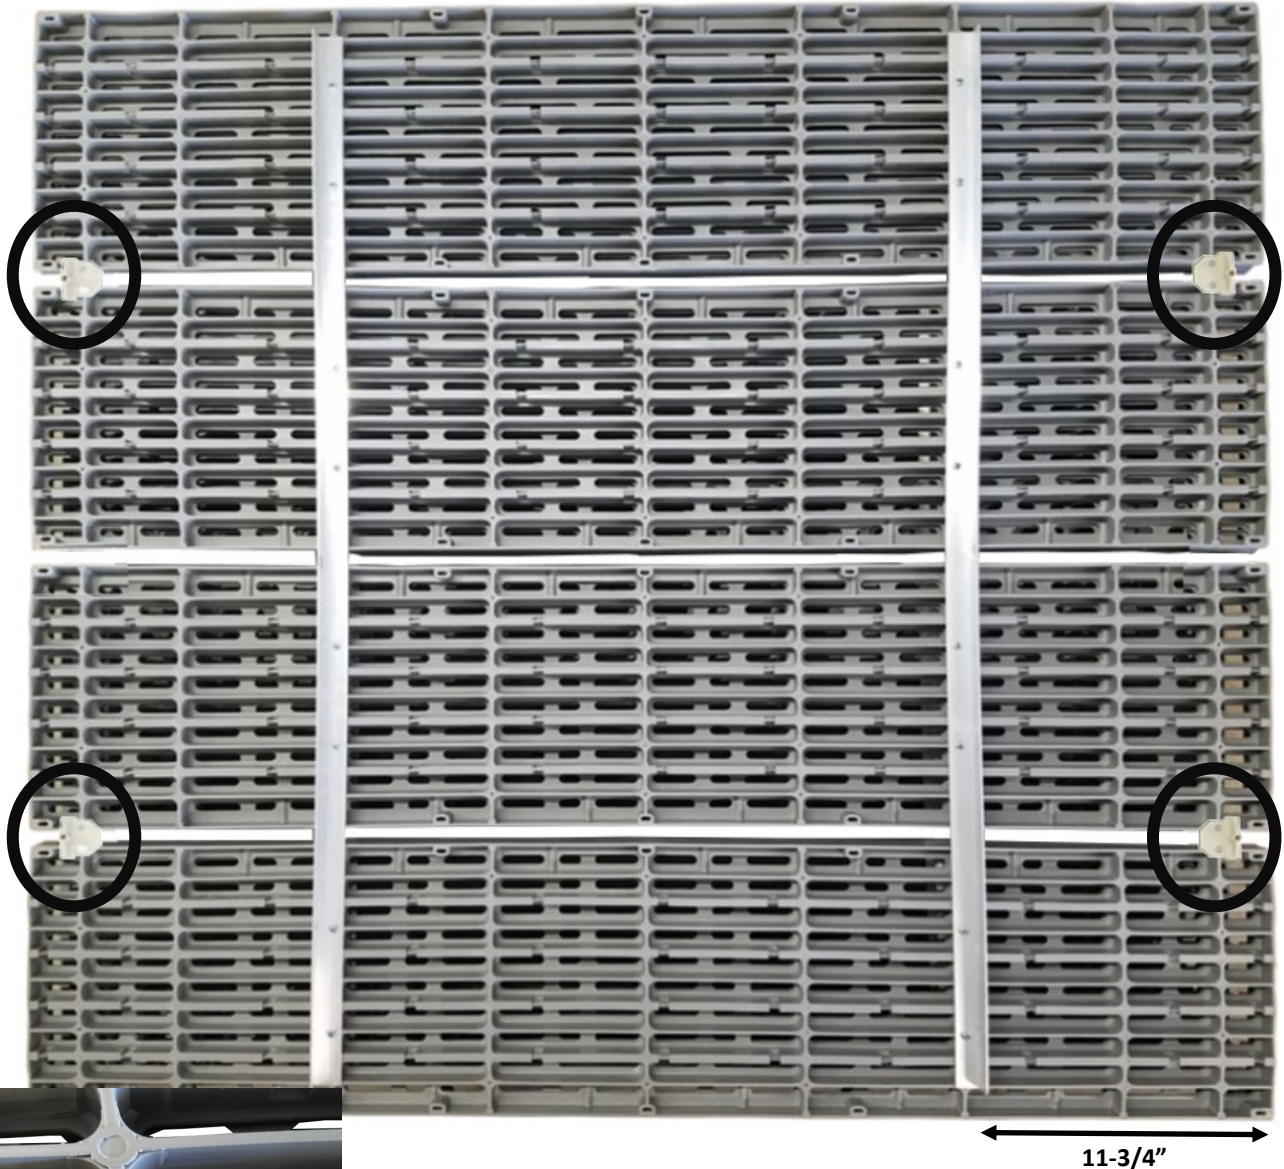

PN #10867: Deck Locker 4pk

Use the optional Deck Locker to secure the 4x4' poly deck panel onto the dock frame by rotating the cam clockwise.

Sold Separately