
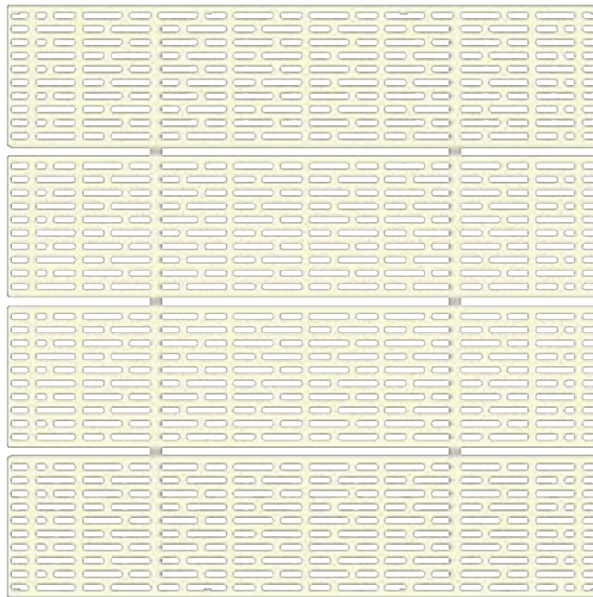


# 4'x4' Poly Panel

## Assembly Instructions

- PN 10851 - Gray 4x4
- PN 10861 - Tan 4x4
- PN 10850 - Gray 1x4
- PN 10860 - Tan 1x4

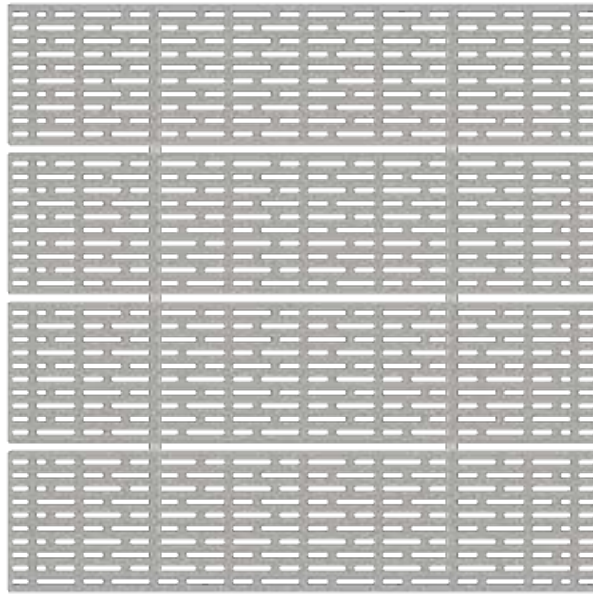

### RECOMMENDED TOOLS



Cordless Drill




Screwdriver  
(Phillips)



Work Gloves

|   | Part Number | Description               | Qty. |
|---|-------------|---------------------------|------|
| A | 10850/60    | Gray/Tan 1'x4' Poly Board | 4    |
| B | 10851-2     | Stringer Angle            | 2    |
| C | Hardware    | M5x25 Pan Head Screws     | 16   |

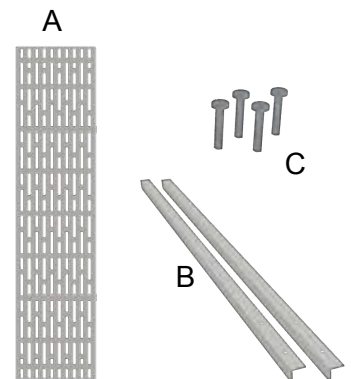

# 4'x4' Poly Panel

## Assembly Steps

- 1 Remove all Poly boards (A) from wrapping. Lay out each 1'x4' board parallel to each other face down. Spacing between each board is approximately  $\frac{5}{8}$ ". Spacing will be pre-determined by the hole placement in the Stringer Angle (B).
- 2 Place Stringer Angle (B) onto the deck boards (A), align the holes in the Stringer Angle with the pre-drilled holes on the Poly Boards. Each Stringer Angle is roughly  $11\frac{3}{4}$ " from the Poly Board edge.



- 3 Secure each Stringer Angle with M5x25mm Pan Head Screws (C).



### Optional Deck Lockers:

PN10867 - Deck Locker (4) Pack secures the 4'x4' Poly Panel onto the Patriot Dock frame by rotating the tab clockwise.

***\*Sold Separately\****

